


# Sending Email

EXPORT → EMAIL

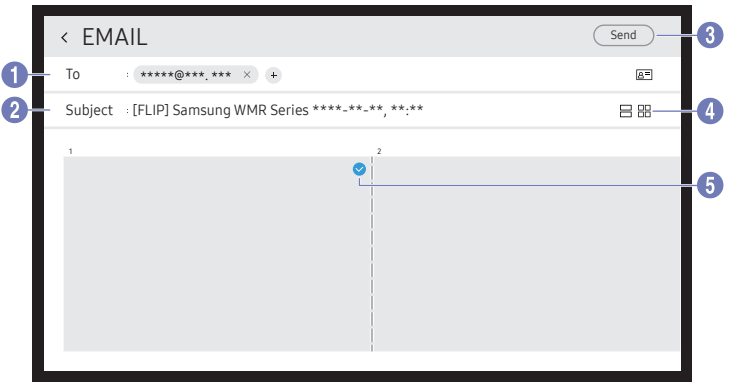

To send your created rolls via email, first register your email account.

- You can register your email account at ⋮ → **SETTINGS** → **Connect** → **Advanced Settings** → **Email**.
- If you set **Sender Authentication** to **Personal Account** at ⋮ → **SETTINGS** → **Connect** → **Advanced Settings** → **Email**, you must authenticate your account each time you send an email. See below.
  - You can send emails when **Sender Authentication** is set to **Personal Account** as long as you have an account on that mail server (**SMTP Server Name** and **SMTP Port Number**).  
Note that it requires the sender to provide the SMTP account ID and password, as well as the sender address for every email.
  - If you set **Sender Authentication** to **Default Account**, you can use the SMTP ID and password you saved to **Default Account** to send emails. (The sender address is usually identical to the SMTP ID, with some exceptions depending on the SMTP server.)
  - For the SMTP information required to register a mail server, contact your mail server administrator.
- Files saved as dedicated files are converted to PDF files and sent.

Parts	Description
1 To	Enter the recipient's email address. <ul style="list-style-type: none"><li>Press + and type text by using the virtual keyboard.</li><li>Press  on the virtual keyboard to enter text by handwriting.</li><li>Search recipient in <b>Local Address Book</b> or <b>LDAP</b> server.</li><li>Equip the product with a tray (optional purchase) to automatically enter the address by tagging an NFC card or sticker containing the information.<ul style="list-style-type: none"><li> : Explains where to tag the NFC card.</li><li>Using the <b>NFC Writing App</b> in mobile device or PC, etc, register an email address with the <b>NDEF Standard &lt;Text&gt; Record Type</b> to an <b>NFC Forum Type 2 Card</b> sold on the market.</li></ul></li></ul>
2 Subject	The email subject is automatically set to the device name and the current date.
3 Send	Send the email.
4  /	Change the page view mode for the roll to send.
5	Select the pages to send.









---

## Printing

To print, you must set up the **Print Server** and the **Clock Set**.


To set up the **Print Server**, the product and the printer you want and your PC must be connected to the same network.

**Flip Printing Software** must be also installed on the PC connected.



-  For information about how to connect to a network, see '[Connecting to a network](#)'.
-  You can set up the **Print Server** at  → **SETTINGS** → **Connect** → **Advanced Settings** → **Print Server**.
-  You can set **Clock Set** at  → **SETTINGS** → **System** → **Time** → **Clock Set**.
-  The **Flip Printing Software** is available on the website
  - <http://displaysolutions.samsung.com>
  - <http://www.samsung.com>
-  Devices that transfer files, such as virtual printers (PDF, XPS, One note, etc.) or fax machines, are not supported, but only printers that can print actual paper are supported.
-  For print paper size, only A4 is supported.

## Installing Flip Printing Software

Follow the onscreen instructions to install **Flip Printing Software**.

-  The installation takes about 10 minutes, and the time taken may vary depending on your PC environment.


### PC installation requirements

- Supported operating systems:  
Windows 7(32/64 bit), Windows 10(32/64 bit), MAC
  -  When installing the software, make sure that critical Windows updates are already installed. Update Windows to the latest version before beginning the setup.
  -  For Windows 7, make sure that Service Pack 1 is already installed.


## Setting up the printer

After the **Flip Printing Software** is installed, make the following settings on the product onscreen menu.


### Setting up automatically




- 1 Select  → **SETTINGS** → **Connect** → **Advanced Settings** menu.
- 2 Select **Print Server** → **Connect to Server** → **Auto**.

### Setting up manually

- 1 Select  → **SETTINGS** → **Connect** → **Advanced Settings** menu.
- 2 Select **Print Server** → **Connect to Server** → **Manual**, and then enter the **Server IP** address of the PC where **Flip Printing Software** is installed.

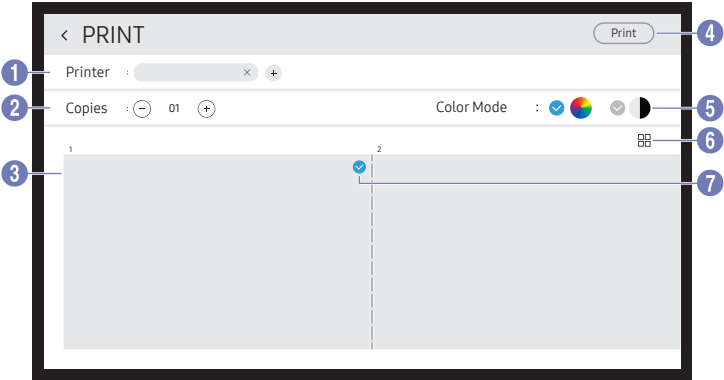
EXPORT → PRINT



Parts	Description
1 Printer	Displays a list of connected printers. Select a printer to print the roll with.
2 Copies	Set the number of prints.
3 Print preview area	Preview the roll to print.
4 Print	Start the printing.
5 Color Mode	Select the color to print the roll with.
6  / 	Change the page view mode of the roll to print.
7 	Select the pages to print.

## Exporting to a USB Device

EXPORT → USB

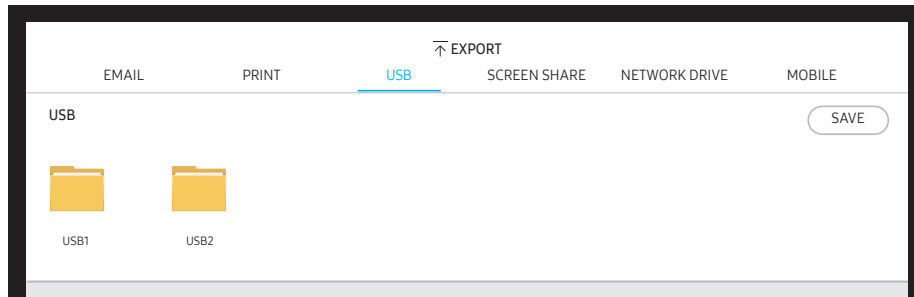


Connect an external HDD or a USB storage device.

 Your device saves files in two versions (IWB and PDF formats).

# Sharing your screen

EXPORT → SCREEN SHARE

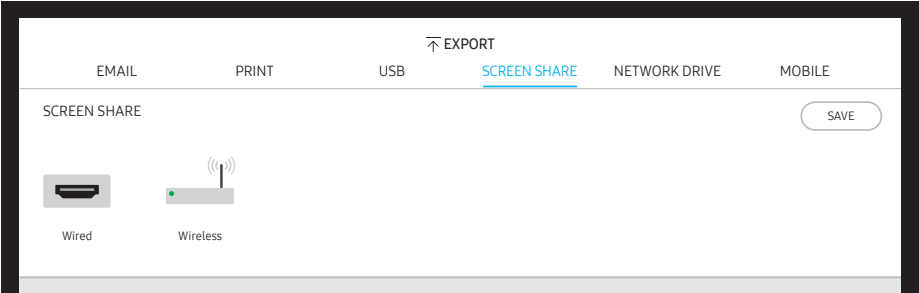

Share your screen with selected devices.

## Connecting with HDMI cables

- 1 Use an HDMI cable to connect the PC to the HDMI IN port on the product or tray (optional purchase).
- 2 Use an HDMI cable to connect the display to the **SCREEN SHARE** port.
- 3 From the top of the screen, select **EXPORT** → **SCREEN SHARE** → **Wired**.
  - If the PC is connected to the HDMI IN 3 port on a tray (optional purchase) without setting it, the PC screen is shared on the display instead.
- 4 The screen is shared on the display.
  - This option supports UHD (50 Hz / 60 Hz) and FHD (50 Hz / 60 Hz) only.
  - The screen may blink once or twice upon when connecting for the first time or when there is a change in the WMR product or source state.

## Connecting wirelessly


From the top of the screen, select **EXPORT** → **SCREEN SHARE** → **Wireless** and then the device to share the screen with.

- SCREEN SHARE** feature works best when using FLIP in landscape orientation.
- Devices must support Screen Mirroring in order to use **SCREEN SHARE** with.




Buttons	Description
Change Device	Change devices to share the screen with.
Disconnect	Stop sharing.

## Exporting from a Network Drive

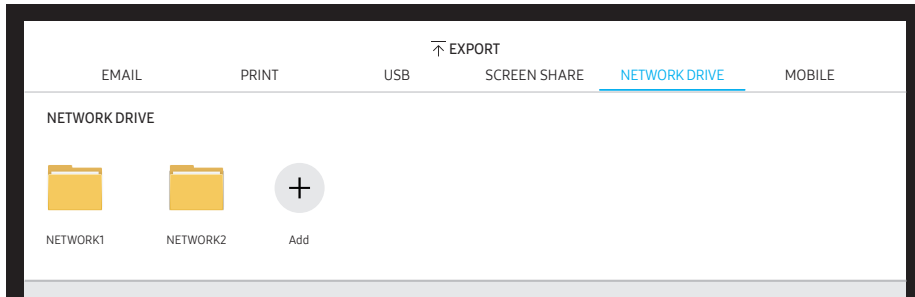EXPORT → NETWORK DRIVE



Connect the network drive to save files.

-  You can register a network drive while the network is connected.  
For information about how to connect to a network, see '[Connecting to a network](#)'.
-  You can register a network drive account at (☰) → SETTINGS → Connect → Advanced Settings → Network Drive → Add Account.  
To register a network drive account, you must enter the Address, Username, and Password.  
To register your network drive account, refer to '[Add Account](#)' for Network Drive.
-  Your device saves files in two versions (IWB and PDF formats).

## Sending to a mobile device

EXPORT → MOBILE

View the screen of the product from a mobile device.

 Sharing is only available for rolls at the moment.

Download Samba client to your mobile device and enter the following information which can be found on the product screen.

- Wi-Fi Name, Wi-Fi Password, Server IP address