


Chapter 03

Writing


What's a 'Roll'?

- Files are called 'rolls' in this product. A 'roll' is a file with multiple pages linked together.
- A roll can have up to 20 pages linked together.
 - ✎ **BRUSH MODE** supports one page only.
- Pages are linked horizontally in landscape orientation, and vertically in portrait orientation.
 - ✎ You can open only one roll on one screen. For more information, refer to '[Managing Rolls](#)'.

Portrait orientation

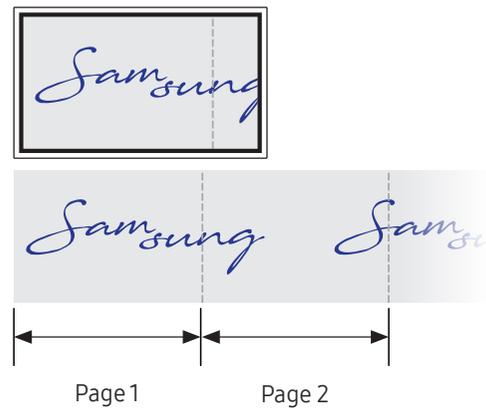


Landscape orientation

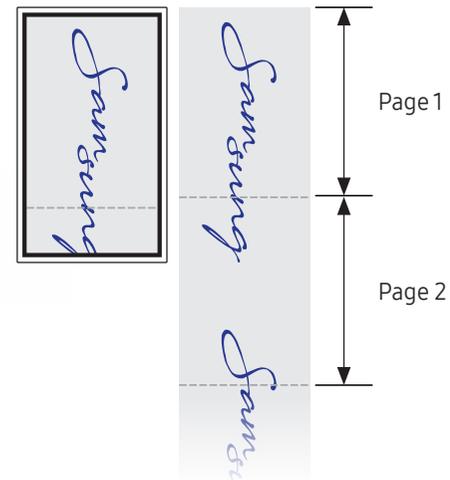

PEN MODE

Screen Elements

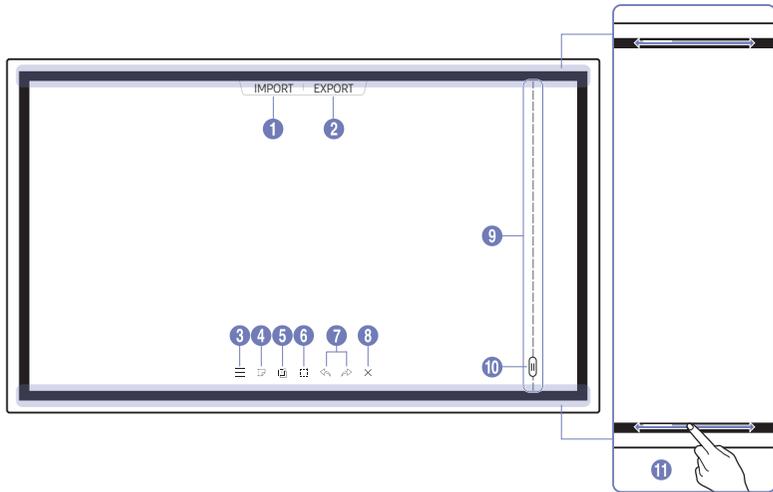


Buttons	Description
1 IMPORT	View the screen of a mobile device or PC connected to the product, or import data such as images from a connected USB or network drive.
2 EXPORT	Share your creations in various ways.
3	Manage and change the rolls and settings.
4	Move or edit the created rolls for each page.
5	Create a layer to write or draw on over the screen which can also be saved the captured image.
6	Select and edit / capture / email / print the pen or brush content.
7	Undo or redo the last action. <ul style="list-style-type: none"> If any page editing actions such as page adding, deleting, and moving are found, is reset. can be performed up to 20 times for each individual.
8	Close the current roll and create a new roll.
9 Page breaking line	See page lines.
10	Scroll through pages.
11 Bezel Scroll	Scroll the black area to move the pages.

Drawing


You can freely use the supplied pen to write anything you want.

- Thin Tip (A): Pen Type
- Thick Tip (B): Highlighter Type

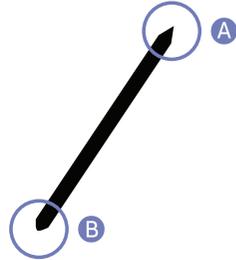


Changing the pen thickness and color

You can change the pen color by touching and holding the screen with the pen.

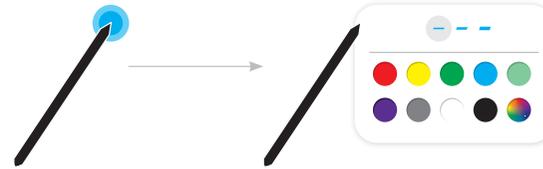


Erasing

You can use your finger or palm to erase your writing.

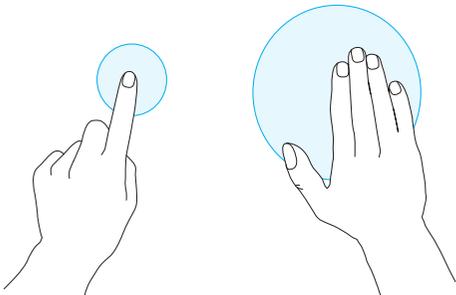

BRUSH MODE

Screen Elements

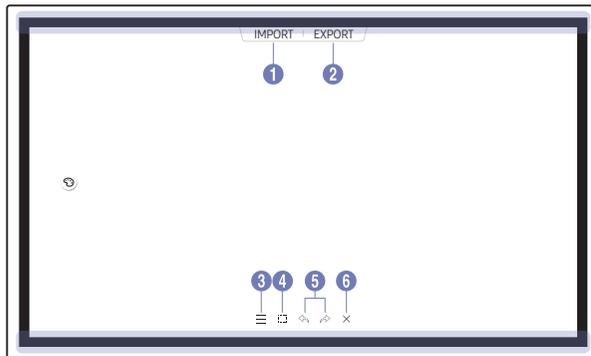

Buttons	Description
1 IMPORT	View the screen of a mobile device or PC connected to the product, or import data such as images from a connected USB or network drive.
2 EXPORT	Share your creations in various ways.
3	Manage and change the rolls and settings.
4	Select and edit / capture / email / print the pen or brush content.
5	Undo or redo the last action. <ul style="list-style-type: none">If any page editing actions such as page adding, deleting, and moving are found, is reset. can be performed up to 5 times for each individual.
6	Close the current roll and create a new roll.


Changes in the thickness depending on the area touching the screen apply immediately. (max. 2 cm)

Brush use is recommended.

BRUSH MODE supports single touch only.

Changing the brush color

After touching the palette on the screen, you can draw a picture by selecting the desired mode during watercolors and emulsifications.


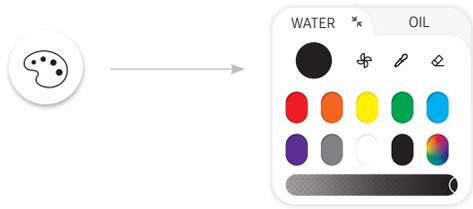


✕: Dry colors to stop blending.

✎: Extract the color from the selected point.


✖: Delete the selected area.

Managing Rolls

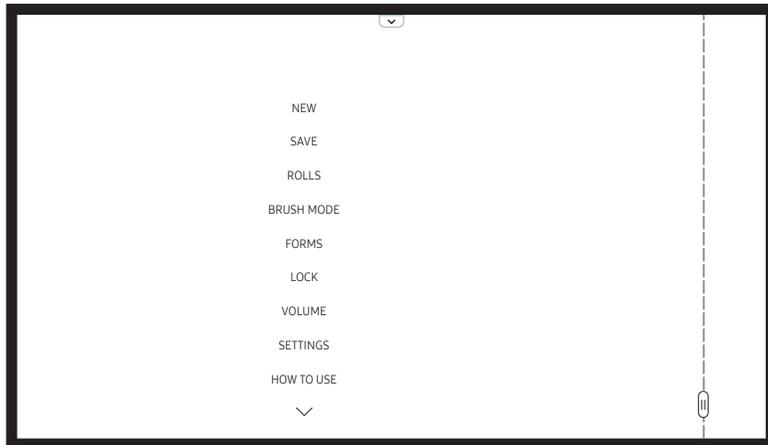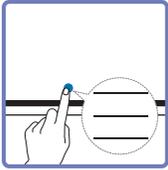


Buttons	Description
NEW	Create a new roll.
SAVE	Save the current roll.
ROLLS	Open, delete or export saved rolls.
PEN MODE / BRUSH MODE	Choose a mode.
FORMS	Change the background format.  This menu is only visible in PEN MODE mode.
LOCK / UNLOCK	<ul style="list-style-type: none">• LOCK: Press a six-digit password to lock the current roll.• UNLOCK: To unlock a locked roll, press the six-digit password you set when locking the roll.  Once unlocked, the current roll remains unlocked until it is locked again.
VOLUME	Adjust the volume.
SETTINGS	You can see the configuration menu.
HOW TO USE	You can view How To Use.

ROLL EXPLORER

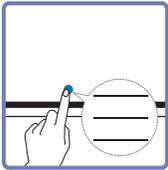

→ **Rolls**

Open, browse and manage rolls via the Rolls explorer.

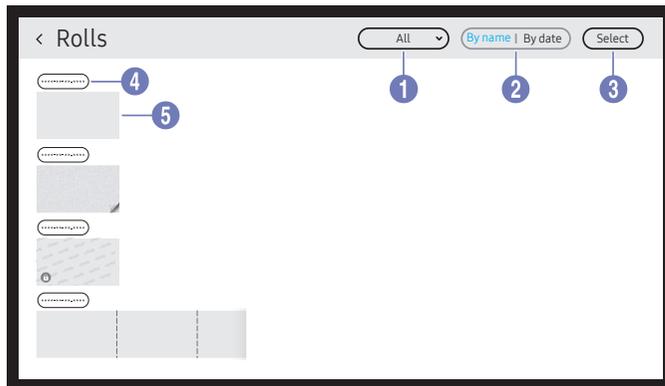


Parts	Description
1 All	You can view the list by the mode you want. <ul style="list-style-type: none"> All / Pen Mode / Brush Mode
2 By name ↔ By date	Set the sort order of files.
3 Select	Select multiple rolls to export or delete.
4 File Name	Rename the file.
5 Rolls	Browse and open a desired roll.

To open a locked roll (🔒), press the six-digit password.


The rolls are sorted by recent date.

Deleting / Exporting rolls

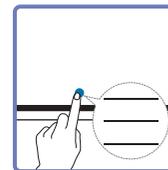


→ **Rolls** → **Select**

You can select multiple rolls to export or delete.

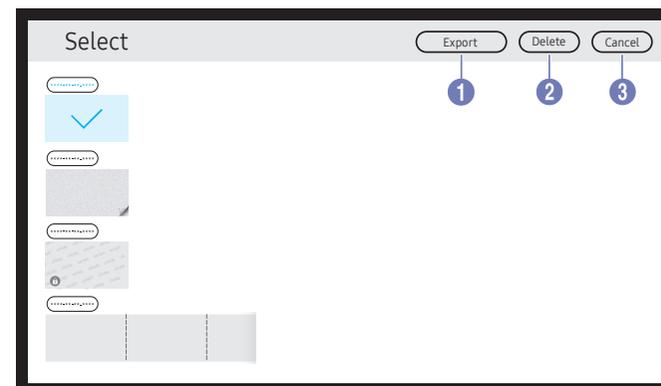


Parts	Description
1 Export	Share the selected rolls any way you like. <ul style="list-style-type: none"> Email(@) / USB(📁) / Network Drive(☁️)
2 Delete	Delete the selected rolls.
3 Cancel	Deselect the roll.

Page Viewer

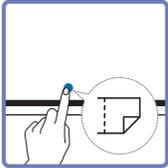

You can move or edit the created rolls for each page.

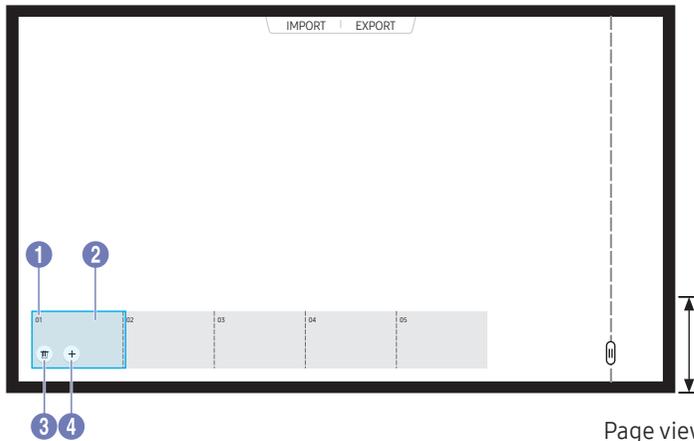


Page viewer area


 This menu is only visible in **PEN MODE** mode.

Parts	Description
1 Page number	Displays the page number.
2 Focus	Displays the page you are currently viewing. <ul style="list-style-type: none">When you tap a page, the focus is moved to it.
3 	Delete the focused page.
4 	Add a new page to the focused position.  You can create up to 20 pages per roll.

Note On/Off

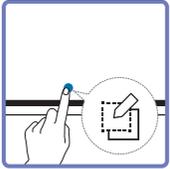


Add a layer over the screen to write or draw on. This can be useful for adding note to content from an external source.

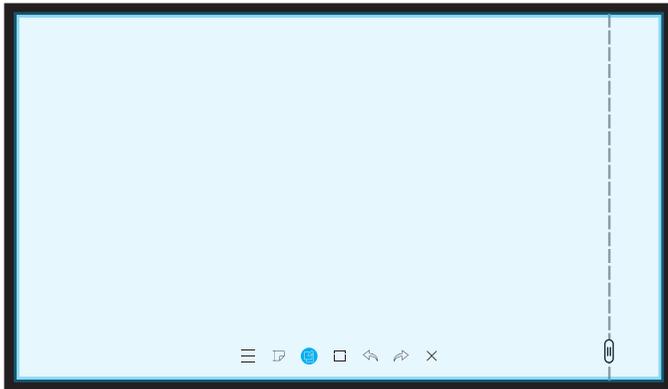


 This menu is only visible in **PEN MODE** mode.

- 1 Tap  to add a new note layer over the screen.
- 2 Take note on the layer.
- 3 Tap  and close.
 - **Save / Don't Save / Cancel**

Using the Selection Tools

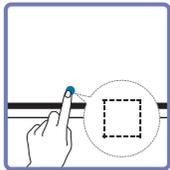


Select and edit / capture / email / print the pen or brush content. Use  to move, rotate, or resize the selection.

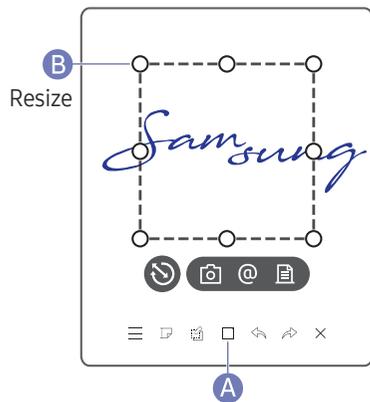

Capture / email / print

- 1 Tap **A** in the screen bottom. A select box appears on the screen.
 -  Drag the **B** of the select box to adjust the size.
- 2 Select the area and choose from  /  /  options.
 -  The product must be connected to a network to use the email or print option.

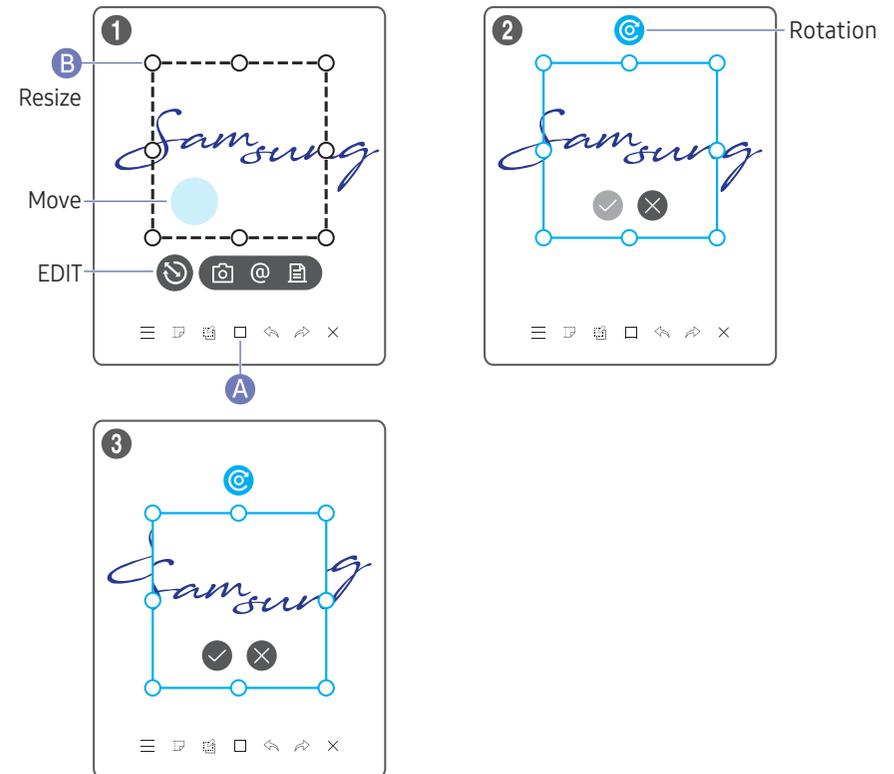

Editing pen and brush content

-  The changes apply to pen and brush content only.
- 1 Tap **A** in the screen bottom. A select box appears on the screen.
 -  Drag the **B** of the select box to adjust the size.
 - 2 Tap  to enable editing for the selected area.
 - 3 Move, rotate or resize the selected area and tap .
 -  Tap  to abort the changes.